 


ELECTRONIC SWITCH

Allows use of two sources with one Amplifier
perfect for adding portable CD Player to existing system.

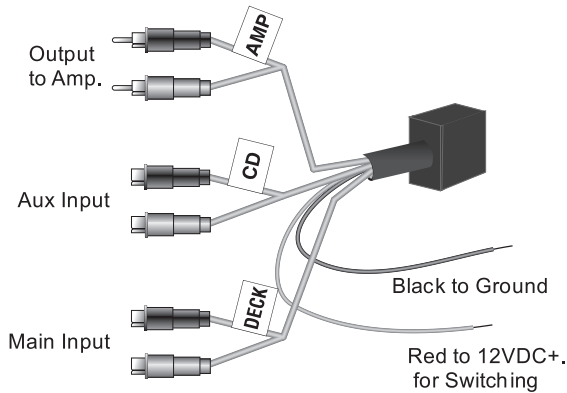


When Red Wire is given 12VDC+, main input (deck) signal is sent to output RCAs (amp). When Red wire is open Aux input (cd) signal is sent to output RCA's (amp). Using a toggle switch to select inputs is recommended.

////ACCELE ELECTRONICS, INC.

ELECTRONIC SWITCH

Allows use of two sources with one Amplifier
perfect for adding portable CD Player to existing system.

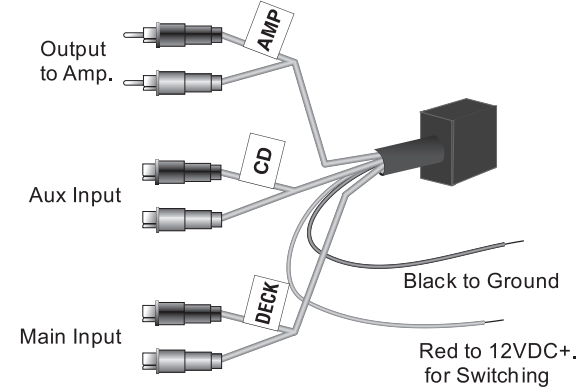


When Red Wire is given 12VDC+, main input (deck) signal is sent to output RCAs (amp). When Red wire is open Aux input (cd) signal is sent to output RCA's (amp). Using a toggle switch to select inputs is recommended.

////ACCELE ELECTRONICS, INC.

ELECTRONIC SWITCH

Allows use of two sources with one Amplifier
perfect for adding portable CD Player to existing system.

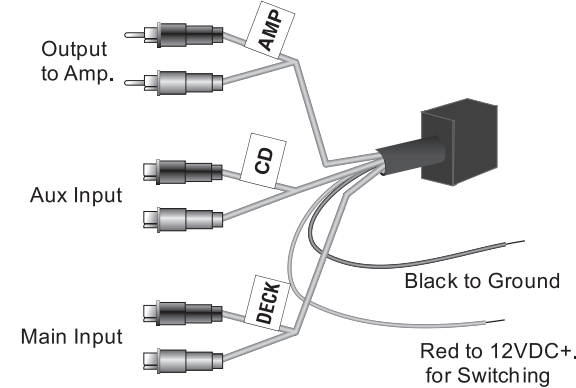


When Red Wire is given 12VDC+, main input (deck) signal is sent to output RCAs (amp). When Red wire is open Aux input (cd) signal is sent to output RCA's (amp). Using a toggle switch to select inputs is recommended.

////ACCELE ELECTRONICS, INC.

ELECTRONIC SWITCH

Allows use of two sources with one Amplifier
perfect for adding portable CD Player to existing system.

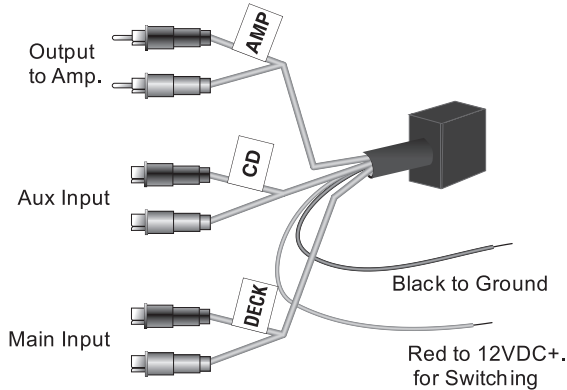


When Red Wire is given 12VDC+, main input (deck) signal is sent to output RCAs (amp). When Red wire is open Aux input (cd) signal is sent to output RCA's (amp). Using a toggle switch to select inputs is recommended.

////ACCELE ELECTRONICS, INC.

ELECTRONIC SWITCH

Allows use of two sources with one Amplifier
perfect for adding portable CD Player to existing system.

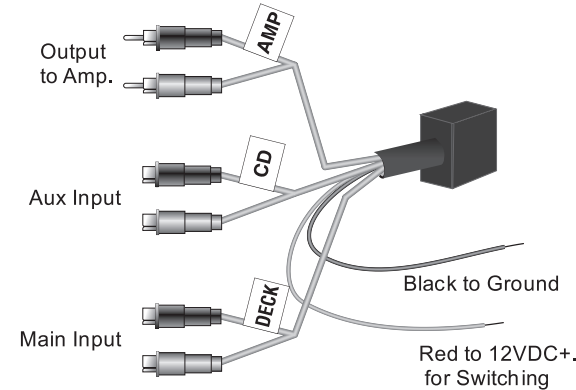


When Red Wire is given 12VDC+, main input (deck) signal is sent to output RCAs (amp). When Red wire is open Aux input (cd) signal is sent to output RCA's (amp). Using a toggle switch to select inputs is recommended.

////ACCELE ELECTRONICS, INC.

ELECTRONIC SWITCH

Allows use of two sources with one Amplifier
perfect for adding portable CD Player to existing system.

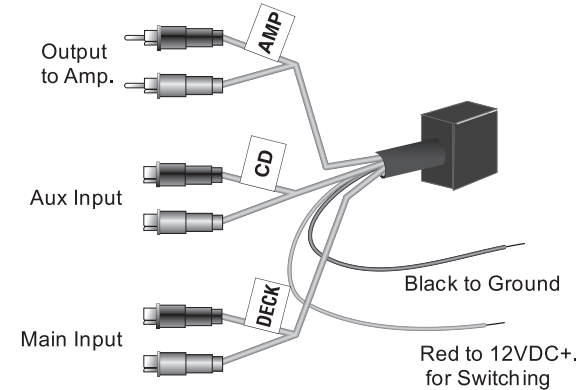

When Red Wire is given 12VDC+, main input (deck) signal is sent to output RCAs (amp). When Red wire is open Aux input (cd) signal is sent to output RCA's (amp). Using a toggle switch to select inputs is recommended.

////ACCELE ELECTRONICS, INC.