
## IN CAR MEDIA PLAYER

User's manual

# **DVD5000 User Manual**

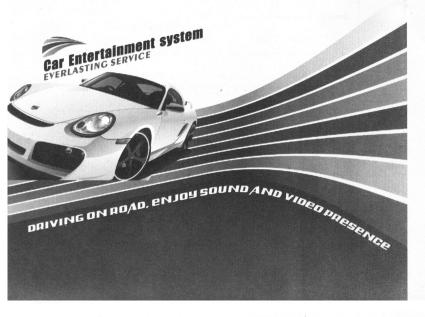

@ QUICK GUIDE

#### Remote Control:

POWER	ON/OFF Power	
SOURCE	Select different sources (DVD/AUX/USB/SD)	
SUB-T	Select the DVD disc subtitle	
<b>A</b>	Eject the disc	
<b>▶/II</b>	Play/Pause	
	Stop	
RPT.	Play repeatedly	
AUDIO	Switch Audio Track.	
TITLE	Locate a specific title chapter or track	
MENU	Locate a specific DVD root MENU or VCD PBC on/off	
<b>A</b>	UP	
▼	DOWN	
◀ '	LEFT	
•	RIGHT	
ENTER	OK	
SETUP	Change the default settings	
VOL	Adjust the sound setting	
44	Fast Backwind	
<b>&gt;&gt;</b>	Fast Forward	
144	Previous	
<b>&gt;&gt;</b>	Next	
ďΧ	Enable and Disable Mute	
DISPLAY	Display the disc status	

#### **CAUTION:**

- Thank you for purchasing this product.
- Please read the manual carefully before use and keep it Safe for your future reference.
- Be sure to disconnect the cable from the(-) battery post before installing this
  unit. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the color coded leads according to the diagram. Incorrect
  connections may cause the unit to malfunction or damage the vehicle's electrical
  system.
- When making connections to the car's electrical system, be aware of the factory
  installed components (e.g. On-board computer).Do not tap into these leads to
  provide power for this unit. When connecting the unit to fuse box, make sure the
  fuse for the intended circuit of the unit has the appropriate amperage. Failure to
  do so may result in damage to the unit and/or the vehicle.
- Be careful that the vehicle's cords do not touch the unit. If the cords are in contact
  with the unit, their sheaths may be damaged due to vibrations generated while
  the vehicle is running, resulting in short-circuit. Leave enough space when routing
  wires to prevent contact between the vehicle's wires and the unit.
- To prevent external noise from entering the audio system. Locate the unit and
  route the leads at least 10 cm away from the car harness. Keep the battery power
  leads as far away from other leads as possible. Connect the ground lead securely
  to a bare metal spot(remove any paint, dirt or grease if necessary) of the car
  chassis.


1

QUICK GUIDE

### Installation:

#### Note:

 The are 2 mounting screws on the case of DVD player to protect unit during shipping. Be sure to remove these screws before installing the unit. Cover the holes with the dustproof paster.

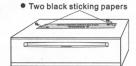


#### MOUNTING:

- Mounting the remote control sensor unit Press the double-sided adhesive tape onto the back of the remote control sensor unit.
- Before completing the sensor mounting, make sure the location selected is within the operating range of the remote control. Peel off the backing of the adhesive tape and press the sensor onto the selected mounting location.




Installation option 1:

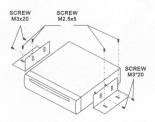


### Installation:


Installation option 2:

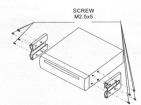

2. Bend these claws outward for a tight fit, if necessary.

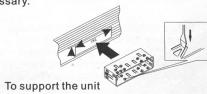

3. To install the unit firstly, then put the unit into the outer trim frame after tear the double-face rubberized fabric off.

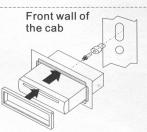

4

@ QUICK GUIDE

### SPECIFICATIONS:

5

**CONNECTIONS:** 


#### Audio Audio output(analog): $1 \pm 0.2V$ $100k\Omega$ Video Video output: $1\pm~0.2V~75\,\Omega$ more than 500 line Resolution: 12 +20% V DC Power Power requirement: Power consumption: less than 20 W 160x44x165mm General Dimensions(approx.): (w/h/d) incl. Projecting parts 1.4Kg Weight: Normal operating temperature range: -5°C(+23°F) TO+55° C(+131° F)

Design and specifications are subject to change without notice. The illustrations in this manual may appear different from the


actual product due to printing conditions.

A CAUTION: HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS. The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the professional mobile video installer to have the word done.

### AV WIRING:

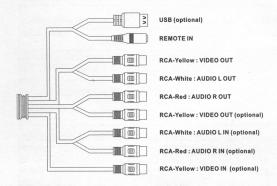

#### POWER SUPPLY:

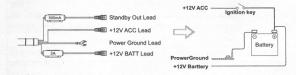

STANDBY OUT LEAD

This lead is used in combination with the other product(like Amplifier) with a remote control input lead.

+12V ACC LEAD

Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides(+12V) only when the ignition is turned on or in the accessory position.

Connect this lead to the positive(+)(12V) post of the vehicle's battery

POWER GROUND LEAD

Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened .

@ QUICK GUIDE

### IN CASE OF DIFFICULTY:

If operation freezes, the screen goes black or the unit should otherwise not function properly, try turning the power off then back on. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected or consult a professional mobile video installer.

Symptom	Cause	Remedy
Unit does not operate.	Fuse is blown.	Replace with a fuse of the specified capacity.
	Monitor's power is not turn on.	Turn on the monitor's power
	Condensation	Wait a while(about 1 hour) for the condensation to dry.
Operation is unstable.	Remote control unit's battery is worn.	Replace the remote control unit's battery with new one.
	Remote control sensor or transmitter is dirty.	Clean the sensor or transmitter.
No picture is produced.	Monitor's mode is not switched to the mode you want to see.	Switch to the mode you want to see.
Playback does not start.	Disc is loaded upside-down.	Check the disc and load it with the labeled side facing upward.
	Disc is dirty.	Clean the disc.
	A disc not able to playback with this unit is loaded.	Check if the disc is able to be played back.
	Parental lock is set.	Cancel the parental lock or change the rating level.
Picture is unclear or noisy	Disc is being fast-forwarded or fast-reversed.	The picture may be slightly disturbed, but this is normal.
	Vehicle's battery power is weak.	Check the battery power and wiring. The unit may turn off automatically if the batter is weak.
	Monitor's fluorescent tube is worn.	Replace the monitor's fluorescent tube.
Image stops sometimes.	Disc is scratched.	Replaced with a non-scratched disc.
No disc	No disc is loaded.	Load a disc.
	Disc is dirty.	Clean the disc.
Not valid	Remote control operation is not possible.	For some discs or playing modes, certain operations are not possible. This not a malfunction.
VIDEO SIGNAL SYSTEM IS NOT CORRECT	PAL( or NTSC) disc is loaded.	Change the TV Output of the unit(see SET UP
No sound	Select the wrong Audio Out	According to the connection, set right Audio ou