
***WINDSHIELD MOUNT
DVR RECORDER***

QUALITY PRODUCTS FOR THE PROFESSIONAL INSTALLER

TABLE OF CONTENTS

INTRODUCTION	3
Contents	
DEVICE	4
INSTALLATION	5
Wiring	
OPERATION	6
Operating Modes	
NOTES	7
PROGRAMMING	8
Record Mode Settings	
Picture Mode Settings	9


INTRODUCTION

Congratulations on your purchase of the Accele “Digital Video Recorder”. You now have the ability to record your daily drive, capture important events, and take pictures when needed. Before installing this product please ensure mounting locations allow for clear view of roadway, and abide by local laws, which may include operating this device while vehicle is in motion.

CONTENTS

- 1 - DVR
- 1 - Window Mount
- 1 - Hardwire Installation Cable
- 1 - 16GB SD Card


DEVICE

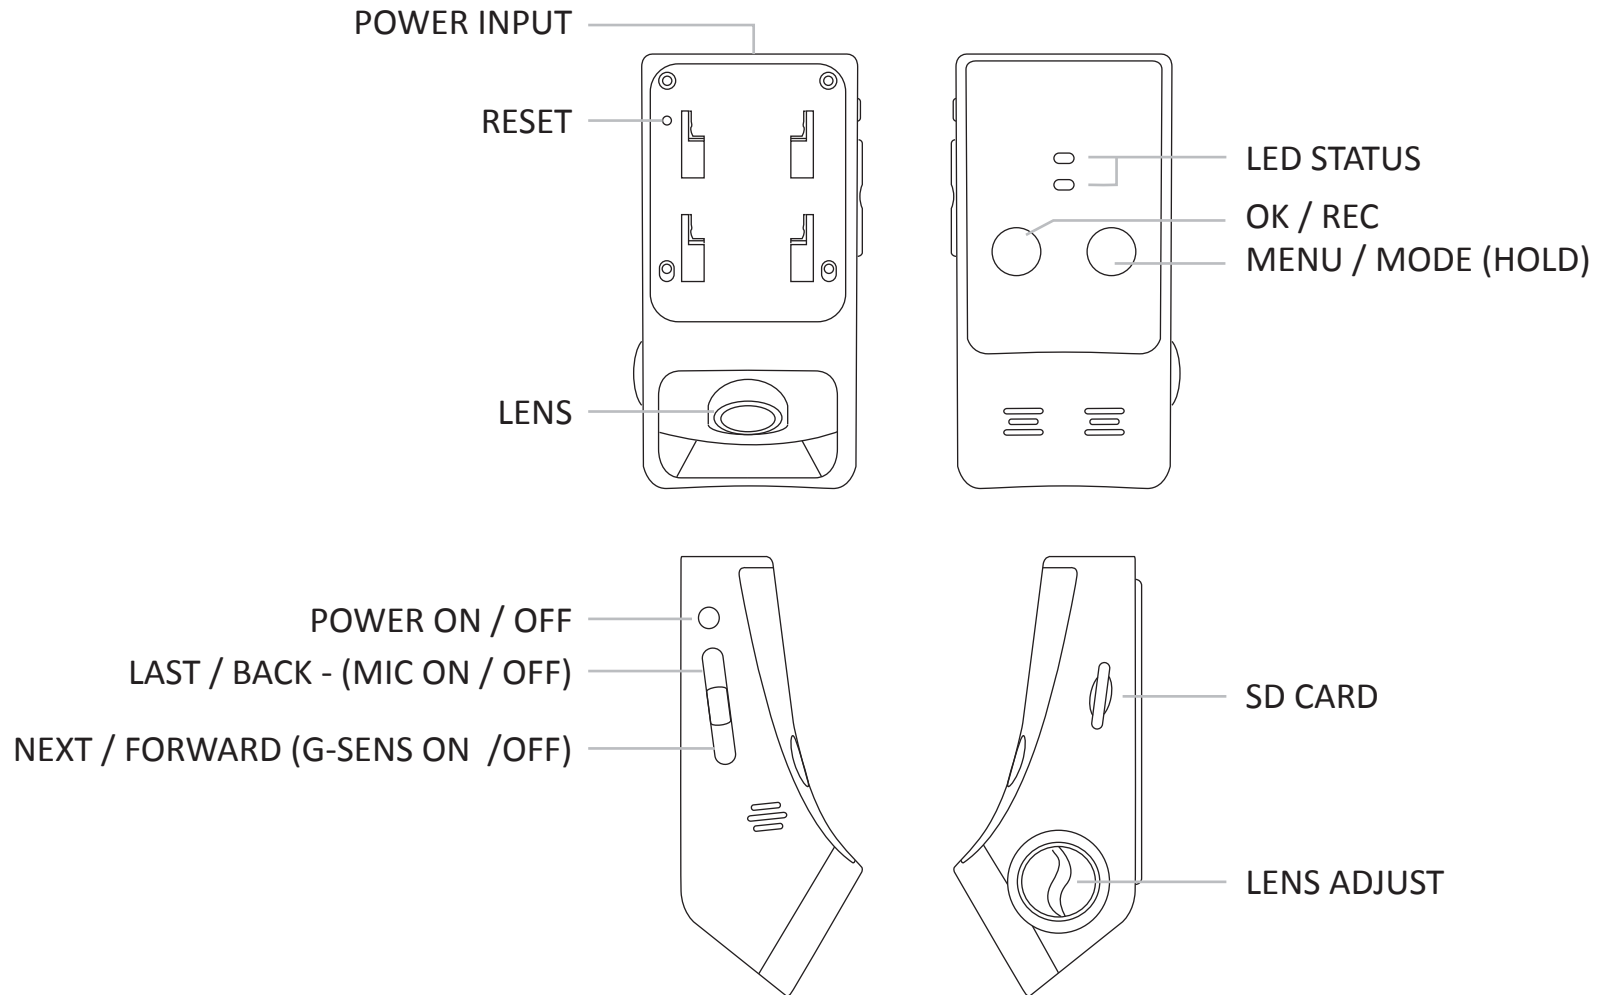

INSTALLATION

INSTALLATION

1. Determine installation location by pre-placing DVR on windshield. Please take note to leave as much visibility out the window as possible.
2. Route power cable to power location and connect to vehicles power source.
3. Clean mounting location and mount DVR according to illustration below.

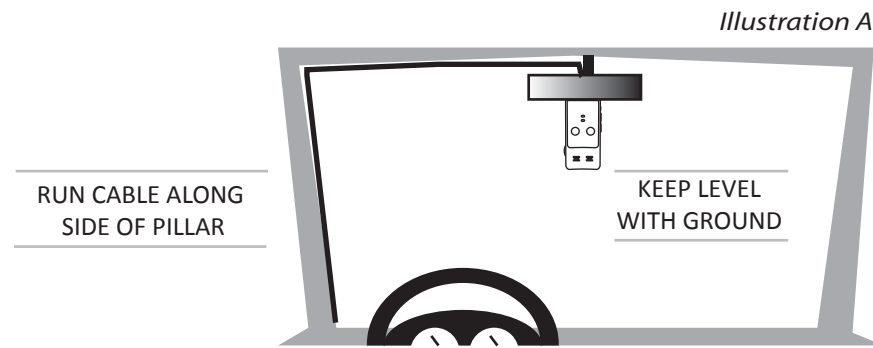

WIRING

YELLOW - 12V CONSTANT BATTERY
RED - 12V SWITCHED ACCESSORY
BLACK - CHASSIS GROUND

OPERATION

1. DO NOT remove the SD card at any time the DVR is on (Status LED's ON). Wait until the unit is completely off to remove SD Card
2. Minimum CLASS 4 or higher for optimum recording (Up to Max 32GB)
3. The DVR is default in "Loop Recording Mode", when the SD Card is full the camera will continue recording by deleting first recorded files.

OPERATING MODES

MODE 1 - RECORDING- Once the vehicle is started the DVR will start continuous recording. When the vehicle is shut off the DVR will start it's power down sequence. This may take up to 5 minutes. ****Do Not remove the SD Card until both Status LED's are off.**

— To enter Mode 2 - Press and Hold "Menu" Button for 5 seconds —

MODE 2 - TAKING PHOTOS - WITH THE DVR IN "OFF" MODE.

1. To take a photo press and release the "OK" button to capture image.

— To enter Mode 3 - Press and Hold "Menu" Button for 5 seconds —

MODE 3 - PLAYBACK - WITH THE DVR IN "OFF" MODE.

1. Press the "NEXT" & "LAST" buttons to choose the file you wish to review.
2. Press the "OK / REC" to begin playback and pause.

— To return to Mode 1 - Press and Hold "Menu" Button for 5 seconds —

****DELETING FILES - WITH THE DVR IN "PLAYBACK" MODE.**

1. Use the "UP / DOWN" Buttons to choose the file you wish to delete, then press the enter button.

*Once a file is deleted it cannot be recovered. Locked Files will not be deleted unless the SD card is reformatted.

NOTES

VIEWING RECORDED FILES - WITH THE DVR “POWERED OFF”

Remove the SD Card and insert it to the SD Card slot on your Computer. Most media players will recognize and play the saved file type. If your media player does not play the files from the SD Card you can download the “VLC MEDIA PLAYER”, which is a free download.

RESET

To perform a reset, locate the reset switch and insert paper clip and push and hold button for 3 seconds. The unit will reset all settings back to default and load original files.

PROGRAMMING

SETTINGS

RECORD MODE SETTINGS - WITH DVR IN "RECORD MODE"

1. Press and release the "MENU" button to enter record settings.
2. Use the "UP" and "DOWN" button to select desired setting.
3. Use the "OK" button to choose that setting.
4. Use the "UP" and "DOWN" button to select desired option.
5. Press the "OK" button to select
6. Press and release the "MENU" button to switch to general settings.
7. Repeat steps 2-5.
8. Press the "Menu" button again to exit

Mode 1	Options
Resolution	720P
Cycle Recording	Off / 1 Min / 3 Min / 5 Min
Exposure	+2.0 / +1.0 / 0.0 / -1.0
Movement	On / Off
Microphone	On / Off
Time	On (Date/Time) / Off
G Sensor	Off / 2G / 4G / 8G

Mode 2	Options
Date / Time	1YY / MM / DD
Beep Sound	ON / OFF
Language	English / Chinese / Japanese
Frequency	50hz / 60hz
Format	Erase SD Card
Default Setting	Yes / Cancel
Version	Current FW

PROGRAMMING

FUNCTIONS

PICTURE MODE SETTINGS - WITH DVR IN "RECORD MODE"

1. Press and release the "MENU" button to enter record settings.
2. Use the "UP" and "DOWN" button to select desired setting.
3. Use the "OK" button to choose that setting.
4. Use the "UP" and "DOWN" button to select desired option.
5. Press the "OK" button to select
6. Press and release the "MENU" button to switch to general settings.
7. Repeat steps 2-5.
8. Press the "Menu" button again to exit

Mode 1	Options
Resolution	12M / 10M / 8M / 5M
Cont. Shooting	ON / OFF
Image Qty.	BETTER / GENERAL / ECONOMY
Sharpness	Date & Logo / Date / Logo / Off
White Balance	English / Spanish / Portugese / Russian / Chinese / Japanese
ISO	50Hz / 60 Hz
Exposure	On / Off
Hand Shake	Off / Level 1 / Level 2 / Level 3 / Level 4
Quick Review	Off / Low / Middle / High
Date Tags	Yes / No

Mode 2	Options
Date / Time	1YY / MM / DD
Beep Sound	ON / OFF
Language	English / Chinese / Japanese
Frequency	50hz / 60hz
Format	Erase SD Card
Default Setting	Yes / Cancel
Version	Current FW